


Wire Balloons



- Keep soil stack and rainwater down-pipes clear of leaves and soil
- Grey PVC coated

Code	Size	Finish	Pack Quantity
RBWP065	2½"	Grey PVC	5
RBWP075	3"	Grey PVC	5
RBWP100	4"	Grey PVC	5
RBWP150	6"	Grey PVC	1
RBWP200	8"	Grey PVC	1
RBWP225	9"	Grey PVC	1

Snowguards

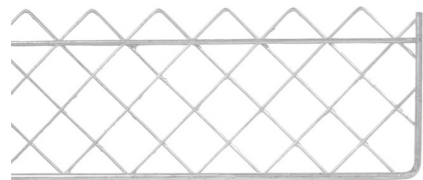


Snowguard



- Fix snowguard to fascia board to stop snow or debris from sliding from roof
- Commonly used above conservatories
- Panels can be fixed to brackets using either galvanised tying wire or cable ties
- Brackets available in 3 types: round gutter (to fix guard in front of gutter), over gutter (to fix guard behind gutter) and v-shaped (designed to fix to the top end of the rafter)
- It is recommended to use a bracket for every 1 metre of snowguard panel
- The panels are fixed to the brackets with galvanised wire or cable ties

Code	Description	Type	Size	Finish	Pack Quantity
RSNG06	Snowguard Panel	-	6" x 2 Metre Length	Galvanised	1
RSNG09	Snowguard Panel	-	9" x 2 Metre Length	Galvanised	1
RSNG06B	Snowguard Bracket	Round Gutter	To Suit 6" Panel	Galvanised	1
RSNG09B	Snowguard Bracket	Round Gutter	To Suit 9" Panel	Galvanised	1
RSNG06OG	Snowguard Bracket	Over Gutter	To Suit 6" Panel	Galvanised	1
RSNG09OG	Snowguard Bracket	Over Gutter	To Suit 9" Panel	Galvanised	1
RSNG06V	Snowguard Bracket	V-Shaped	To Suit 6" Panel	Galvanised	1
RSNG09V	Snowguard Bracket	V-Shaped	To Suit 9" Panel	Galvanised	1


Hip Irons

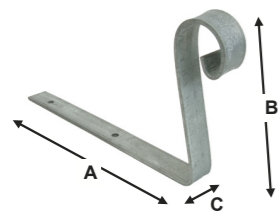

- Screwed to rafter and embedded in mortar at base of hip to prevent ridge tiles from slipping off
- The final dimension is the thickness of the material

Code	Description	Size	Finish	Pack Quantity
RHIG3	Baby	205mm (A) x 125mm (B) x 25mm (C) x 3mm	Galvanised	1
RHIG4	Standard	270mm (A) x 150mm (B) x 25mm (C) x 4mm	Galvanised	1
RHIG5	Large	270mm (A) x 150mm (B) x 25mm (C) x 5mm	Galvanised	1

Soakers

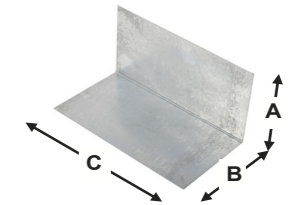


- Long lasting, easy to use and pre-formed
- Cost effective alternative to lead flashing
- Suitable for slate and tiled roofs

Code	Size	Material	Pack Quantity
RSAB050100150	50mm (A) x 100mm (B) x 150mm (C)	Aluminium	25
RSAB050100300	50mm (A) x 100mm (B) x 300mm (C)	Aluminium	25
RSAB075075150	75mm (A) x 75mm (B) x 150mm (C)	Aluminium	25
RSAB075075300	75mm (A) x 75mm (B) x 300mm (C)	Aluminium	25
RSAB075075340	75mm (A) x 75mm (B) x 340mm (C)	Aluminium	25
RSAB075100150	75mm (A) x 100mm (B) x 150mm (C)	Aluminium	25
RSAB075100180	75mm (A) x 100mm (B) x 180mm (C)	Aluminium	25
RSAB075100300	75mm (A) x 100mm (B) x 300mm (C)	Aluminium	25
RSAB075100340	75mm (A) x 100mm (B) x 340mm (C)	Aluminium	25

- Used in the fixing of the slates to help combat wind 'lift'
- Also allow slates to bend and recover under wetting and heating cycles
- Manufactured from copper to help minimise the effect of corrosion

Code	Size	Material	Pack Quantity
RRDC100	21mm x 0.45mm	Copper	100
RRDC500	21mm x 0.45mm	Copper	500
RRDC	21mm x 0.45mm	Copper	1000

Copper Disc Rivets

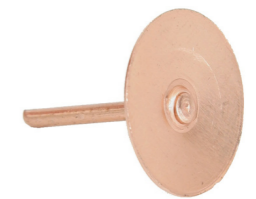

- Also known as Slate Straps and used for repairing slates
- Nail to the batten, slide the slate into place and bend the end of the strap up over the bottom edge of the slate to hold it in place

Code	Length	Length	Pack Quantity
RRSC150	6"	150mm	100

Copper Slate Strips



- Used for repair, slip it under the slate and hook or drive it in place without having to remove any other slates
- Stainless Steel Blacked for corrosion resistance
- Grade 316 hooks should be used in marine environments to ensure longevity of the roof

Code	Grade	Type	Size	Finish	Pack Quantity
RSHTB080	304	Batten Hook	80mm	Stainless Steel Blacked	500
RSHTB100	304	Batten Hook	100mm	Stainless Steel Blacked	500
RSHTP080	304	Point Driven	80mm	Stainless Steel Blacked	500
RSHTP100	304	Point Driven	100mm	Stainless Steel Blacked	500
RSHXB080	316	Batten Hook	80mm	Stainless Steel Blacked	500
RSHXB100	316	Batten Hook	100mm	Stainless Steel Blacked	500
RSHXP080	316	Point Driven	80mm	Stainless Steel Blacked	500
RSHXP100	316	Point Driven	100mm	Stainless Steel Blacked	500

Slate Hooks

